



Britton Valves
Kynochs, Bideford
Devon, EX39 4DT

Tel: 01237 477465
Fax: 01237 421459

E-Mail: post@britton.dowsongroup.com
www.dowsongroup.com

TYPE LP VALVE - SEAL REPLACEMENT.

1. Turn off electrical and air supplies to valve.
2. Disconnect on the outside of the valve body the seal from the pneumatic fitting.
3. Plate supports that restrict the removal of the original seal must be removed.
4. Remove old seal.
5. Clean the seal groove of old seal adhesive.
6. Add a thin even layer of seal adhesive to the seal groove.
7. Push the air inlet tube of the seal through the hole in the valve body.
8. Locate the seal with the grooved edge facing toward the position of the slide plate.
9. Reassemble

THE DOWSON GROUP

www.dowsongroup.com

BRITTON VALVES

DOWSON HANDLING

HELI-TEC

PROCOL

WRIGHTS



Company Registration Number 709486 England
